
# Important!

It is important that all roof racks and accessories are installed and attached correctly. Failure to follow correct attachment procedure could result in an accident, serious injury or death to others. The driver of the vehicle is responsible for securing the roof racks and accessories, checking the attachments, periodically checking bolt torque and visual inspection of all components for wear and damage. Do not attempt to fit the roof rack system or accessory to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer or retailer from where they were purchased.

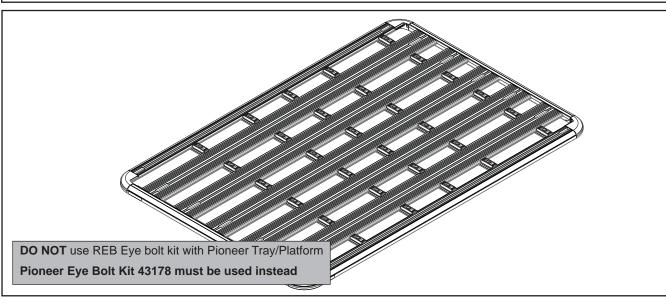

Care Instruction: Wash vehicle roof prior to installing Rhino Pioneer Alloy Tray.

# **Download your Vehicle Fitment Sheet**

Individual fitment sheets exist for every vehicle and tray size available, they provide specific fitment information that is relevant to each individual vehicle.

Fitment sheets can be downloaded from the RhinoRack Website under 'Fit My Car' Simply select the make and model of the vehicle, select the Pioneer tray of choice and click on instructions:

# **Important Information**

Load Ratings ..... Page 3

Recommendations..... Page 3

Sensitivity to cross winds, behaviour in curves and braking....... Page 3

Use only non-stretch fastening ropes or straps.

Please remove cross bars when putting vehicle through an automatic car wash.

Note for Dealers: It is your responsibility to ensure instructions are given to the end user or client.

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: R752 Prepared By: Kayle Everett Authorised By: Chris Murty

Fit Time: 45min Issue No: 08 Issue Date: 9/07/2018

These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.




					יין מכע							
Pal	Parts List						Quantity	ntity				
Item	Component Name	Part No.	42100BF	42101BF	42102BF	42103BF	42104BF	42105BF	42106BF	42107BF	42108BF	42109BF
_	4mm Allen Key	H048	_	1	1	1	_	_	_	_	1	
2	5mm Allen Key (Double Ended)	H034	1	1	1	1	1	1	1	1	1	_
3	Plastic Side Tab	Various	M754 - 6	M756 - 6	M754 - 10	M756 - 10	M755 - 10	M754 - 14	•	M754 -10	M755 - 10	M754 - 6
4	Plastic Tab	M753	9	12	15	20	20	28	6	15	20	9
5	Corner Moulding Cover FR/RL	M431	2	2	2	2	2	2	2	2	2	2
6	Corner Moulding Cover FL/RR	M432	2	2	2	2	2	2	2	2	2	2
7	Corner Moulding FR/RL	M427	2	2	2	2	2	2	2	2	2	2
8	Corner Moulding FL/RR	M428	2	2	2	2	2	2	2	2	2	2
9	Corner T Moulding FR/RL	M429	2	2	2	2	2	2	2	2	2	2
10	Corner T Moulding FL/RR	M430	2	2	2	2	2	2	2	2	2	2
1	Crossbar	,	ω	ω	51	ΟΊ	51	7	2	51	σı	ω
12a	Frame End Extrusion	1	2	2	2	2	2	2	2	2	2	2
12b	Frame LH Side Extrusion	,		_	1	_					1	_
12c	Frame RH Side Extrusion		1	1	1	1	_	1	1	1	1	1
13	M5 x 16mm Plastite Screw	1	16	16	16	16	16	16	16	16	16	16
14	M6 Spring Washer	W004	9	12	15	20	20	28	2	15	20	9
15	M6 Nyloc Nut	N013	22	26	26	30	30	34	12	26	30	22
16	M6 x 12.5mm Flat Washer	W003	16	20	16	20	20	20	8	16	20	16
17	M6 x 16mm Dome Socket Screw	B036	16	20	16	20	20	20	8	16	20	16
18	M6 x 16mm T-Bolt	B089	6	တ	10	10	10	14	4	10	10	o
19	M6 x 20mm Security Head	B062	9	12	15	20	20	28	2	15	20	9
20	M6 x 16mm Flat Washer	W031- BLK	15	18	25	30	30	42	6	25	30	15
21	M8 Channel Nut	N003	ဝ	တ	10	10	10	14	4	10	10	o
22	M8 15mm Flat Washer		ဝ	တ	10	10	10	14	4	10	10	o
23	M8 17mm Flat Washer	W020	റ	6	10	10	10	14	4	10	10	တ
24	M8 Spring Washer	W019	6	6	10	10	10	14	4	10	10	6
25	M8 x 20mm Dome Socket	B155	റ	တ	10	10	10	14	4	10	10	တ
26	Plank	,	4	51	4	Οī	51	5	2	4	5	4
27	Plank Insert	M759	16	20	16	20	20	20	8	16	20	16
28	Instructions	R752			_				<u></u>			



12b 12a Item | Component Name 12c 28 27 26 25 24 23 21 20 19 3 17 15 14 3  $\Rightarrow$ 10 Parts List 16 9 ω Ŋ 4 ω 0 2 M6 x 20mm Security Head M6 Spring Washer M5 x 16mm Plastite Screw Plank Insert M8 x 20mm Dome Socket M8 Spring Washer M8 Channel Nut M6 x 16mm Flat Washer M6 x 16mm T-Bolt Frame RH Side Extrusion Crossbar Corner T Moulding FL/RR Corner Moulding FL/RR Plastic Side Tab 5mm Allen Key (Double Ended) 4mm Allen Key Instructions M8 17mm Flat Washer M8 15mm Flat Washer M6 x 16mm Dome Socket Screw M6 x 12.5mm Flat Washer M6 Nyloc Nut Frame LH Side Extrusion Frame End Extrusion Corner T Moulding FR/RL Corner Moulding FR/RL Corner Moulding Cover FL/RR Corner Moulding Cover FR/RL Plastic Tab W031-BLK Part No. Various W020 M759 B155 W019 B062 B089 B036 W003 W004 M430 M429 M428 M427 M432 M431 M753 R752 N003 H034 H048 N013 M756 - 6 42110BF 20 3 12 20 26 12 6 6 6 0 16 N N N 12 5 0 တ N ω N 2 Ν M755 - 6 42111BF 20 20 0 8 12 6 26 12 16 12 0 0 0 2 ω N N N 2 2 M755 - 4 42112BF 20 24 16 20 12 S 4 4 4 4  $\infty$ 4  $\infty$ N N N N N N N N ω M755 - 6 42113BF Quantity 3 12 20 16 20 တ 0 0 6 26 12 ယ N 12 M757 - 12 42119BF 24 0 12 12 42 30 12 24 24 36 30 16 N 0 N N N N N 2 30 12 12 M755 - 6 42121BF 20 26 20 Ŋ 6 0 6 18 12 6 12 16 12 ၈ 6 2 ω N N N Ν N N M754 - 16 42122BF 20 32 20 16 16 48 32 16 36 32 16 S 6 16 16 2  $\infty$ N 2 N 2 2 2



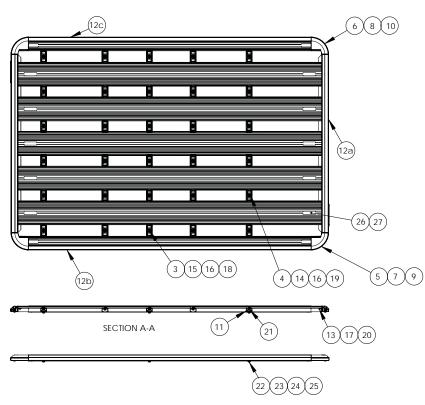

Maximum carrying capacity: Refer vehicle manufacturer specifications, less weight of alloy tray below (includes leg kits):

42100BF = 19.5kg, 42101BF = 22.5kg, 42102BF = 25kg, 42103BF = 29.5kg,

42104BF = 32kg, 42105BF = 40kg, 42107BF = 27.5kg,

42108BF = 28.5kg

42109BF = 17.5kg, 42110BF = 20kg, 42111BF = 21kg,

42112BF = 16kg,

42113BF = 30kg, 42117BF = 21.6kg, 42119BF = 39.5kg, 42121BF = 18.5kg and 42122BF =46.1kg.

### Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your cross bars. Bolt connections should be checked again at regular intervals (probably once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the alloy tray each time it is re-fitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.


### Sensitivity to cross winds, behaviour in curves and braking.

The handling characteristics of the vehicle, changes when you transport a load on the roof. For safety reasons, we recommend you exercise extreme care when transporting wind-resisting loads; special consideration must be taken into account when braking.


### Load Ratings:

Maximum permissible load is set by the vehicle manufacturer less the weight of trays above (weights above include leg kits). When alloy trays are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit. Although the alloy trays are tested and approved to AS1235-2000, Australian road conditions can be much more rigorous. However, increasing the number of mount points to the vehicle does not increase the vehicles maximum permissible


# Instructions

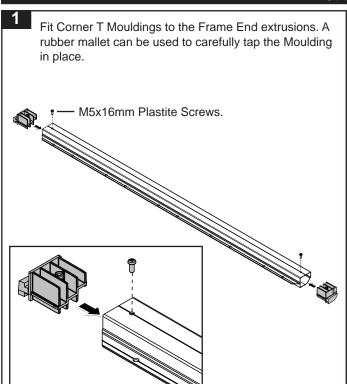



Fit the Plank Inserts into end of plank at both ends. Orientation of inserts is critical. Carefully tap the Inserts into place with a rubber mallet.

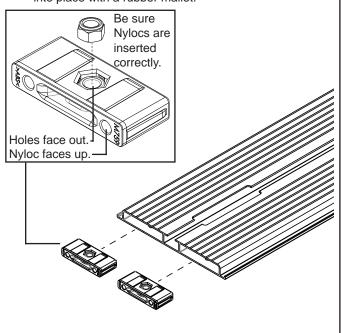



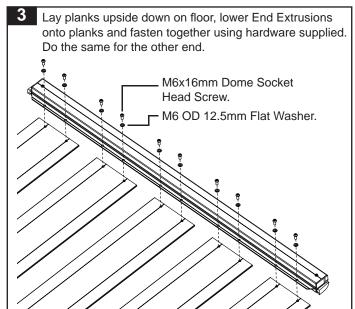

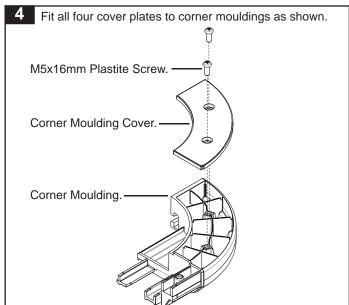


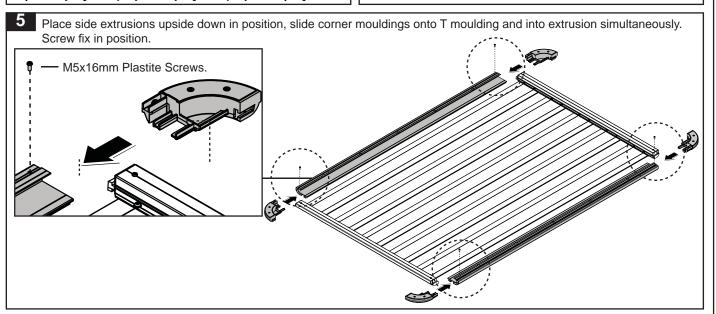


Note: Image example only. Find your vehicle specific layout at the Rhino-Rack website. Individual fitment sheets exist for every vehicle and tray size available, they provide specific fitment information that is relevant to each individual vehicle.


Place the Crossbars in at an angle and rotate under the lip of the Frame Side Extrusions.


The Crossbar (Legs) will align with the oval hole.

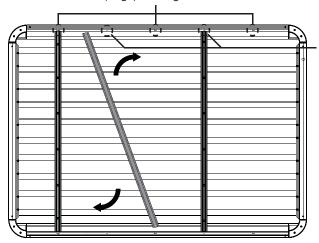

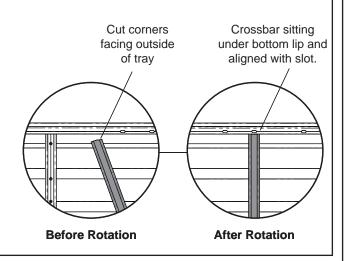




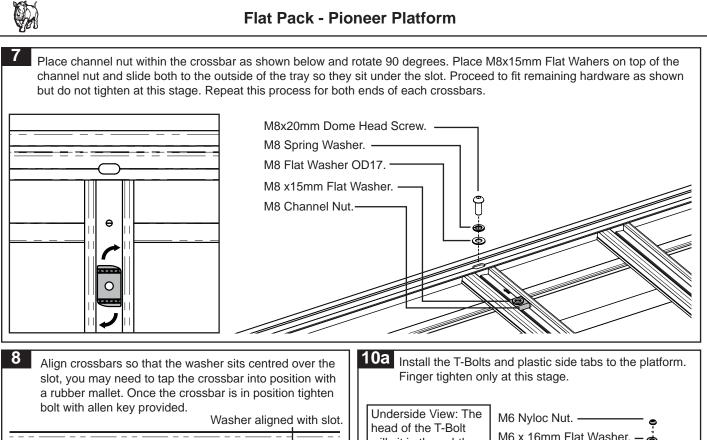


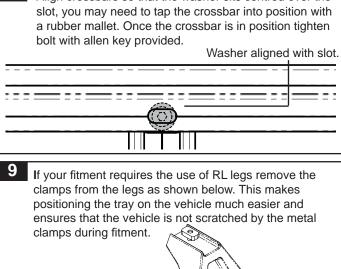

Rubber Foot

Removed Clamps and Clamp Hardware

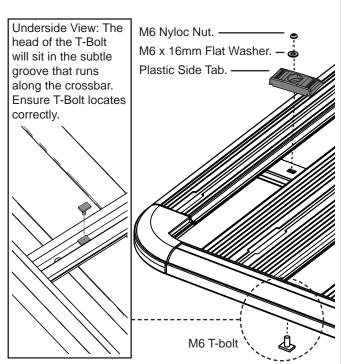

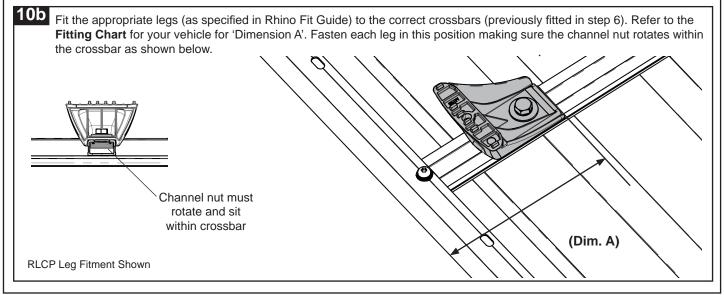




**Fasten Legs to Vehicle.** Secure the tray to the vehicle by fastening each of the legs in position. Refer images below for the appropriate system being used on your vehicle:

## **RL Leg Fitment**

Re-fit the clamp brackets and hardware previously removed in Step 10. Refer leg kit fitting instructions for details on fitting the clamps securely to the vehicle.


<u>Tip:</u> You may need to place a finger behind the leg and hold the dowel nut in position. This will also allow you to rotate the dowel nut to align the thread.



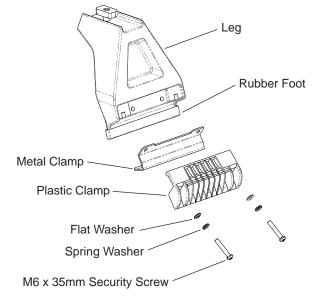

# 11 Continued RLCP, RLTP/RLTF & RLT600 Leg Fitment

Tighten security screws to secure the legs to the vehicle as shown below.

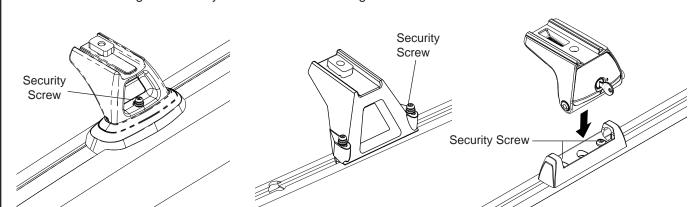

12 Install the Plastic Tabs. Tighten all Tabs, including the Side Tabs previously installed.

